


Tension Fabric Accessory - TFA-CBAR-06

TFA-CBAR-06

Tension Fabric counters couple lightweight hardware with state-of-the-art printed stretch silicone edge push-fit fabric graphic to create funky and functional reception stands.

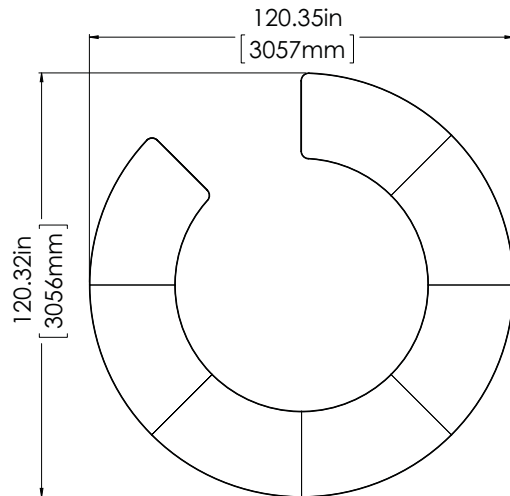

features and benefits:

- Premium aluminum tube frames with cam lock assembly
- Easy to store and ship
- Counter top and base (come in a variety of colors)
- One push-fit fabric graphic
- Lifetime limited hardware warranty against manufacturer defects

dimensions:

Hardware	Graphic
Assembled unit: 120.35" w x 37.8" h x 120.32" d 3056mm(w) x 960mm(h) x 3056mm(d)	Refer to related graphic template for more information.
Approximate weight with cases: 460 lbs / 209 kgs	

Shipping

Packing case(s):
4 OCFM

Shipping dimensions:

38" l x 26" h x 14" d
965mm(l) x 660mm(h) x 356mm(d)

Approximate total shipping weight (includes cases & graphics):
467 lbs / 212 kgs

additional information:

Graphic material:
dye-sublimation push-fit fabric graphic

Counter top Dimensions:
120" w x 1.18" h x 24" d
Inside Radius 2'
Outside Radius 5'

Counter top Max Weight Capacity: 45 lbs.

Wood Finish Options



silver black mahogany natural

2 person assembly recommended:



Included In Your Kit


Tools, Components, & Connectors



CT-W-06-C-01 x1



CT-W-06-C-02 x1

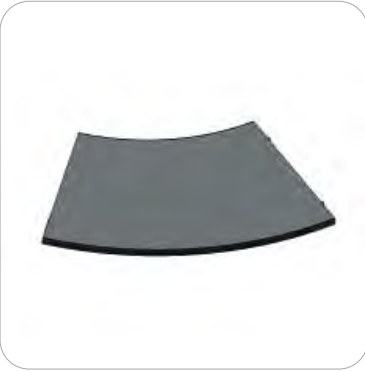

CT-W-06-C-03 x5



BASE-W-06-C-01 x1



BASE-W-06-C-02 x1



BASE-W-06-C-03 x5



TRI30-COUNTER x7



SET-SCREW-5-16-2 x42



FLANGE-WING-NUT-5-32 x42




ROTO-HEX-KEY x1



T-HANDLE-5-32 x1


Graphics

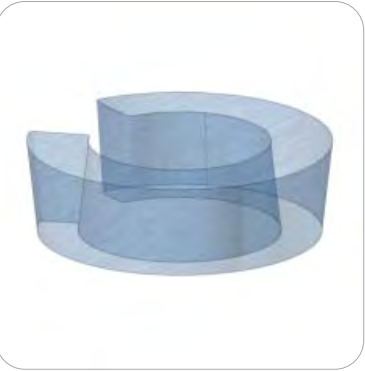

W-06-C-07-G x1

Exploded View

TFA-CBAR-06

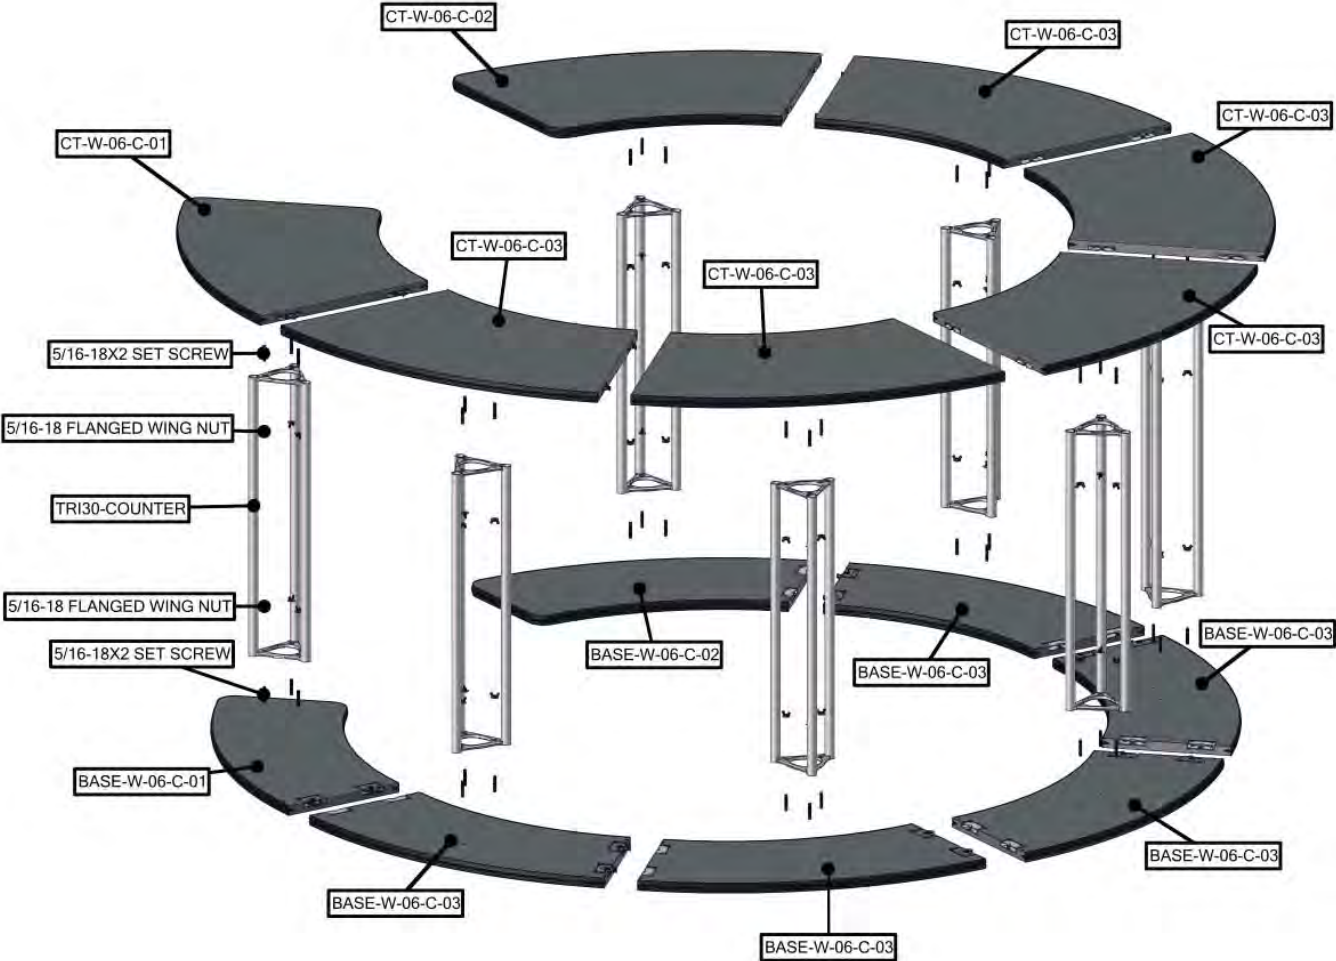


Kit Assembly

Step by Step

Step 1.

Locate your counter bases and position them together. Lock them together using the locking mechanisms on the top side of the bases. You will need your L-shaped allen key to do so.



Reference the Exploded View for more information.

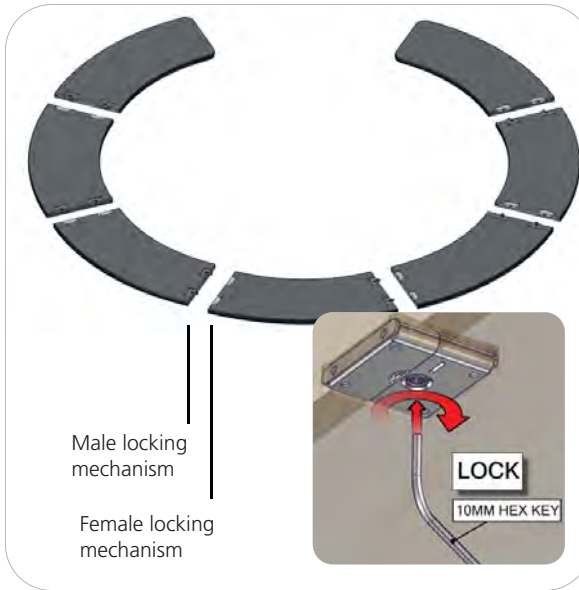

Step 3.

Locate your counter tops and fastening hardware. Starting from one end, hand tighten the truss on to the counter tops with your T-Handle and lock the tops together using your L-shaped allen key.


Reference the Exploded View for more information.

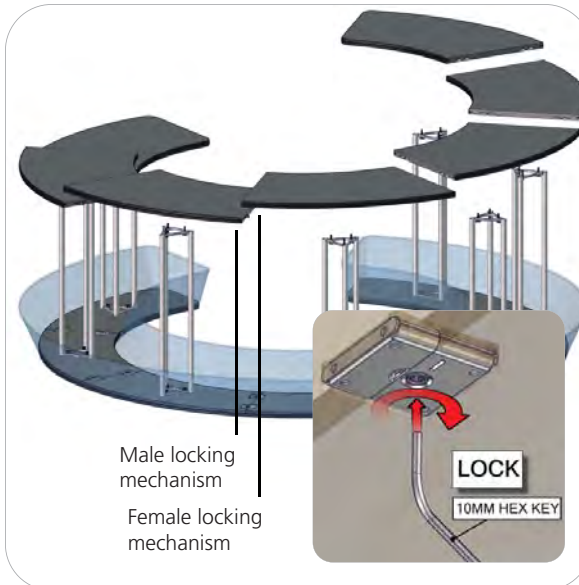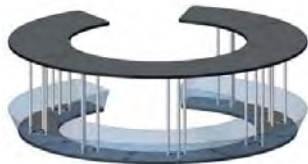

Step 2.

Locate your triangular truss and fastening hardware. Hand tighten the truss onto the bases with your T-Handle allen key. Locate your silicone edge graphic. Push the silicone edges into the grooves of the counter base assembly.

Reference the Exploded View for more information.

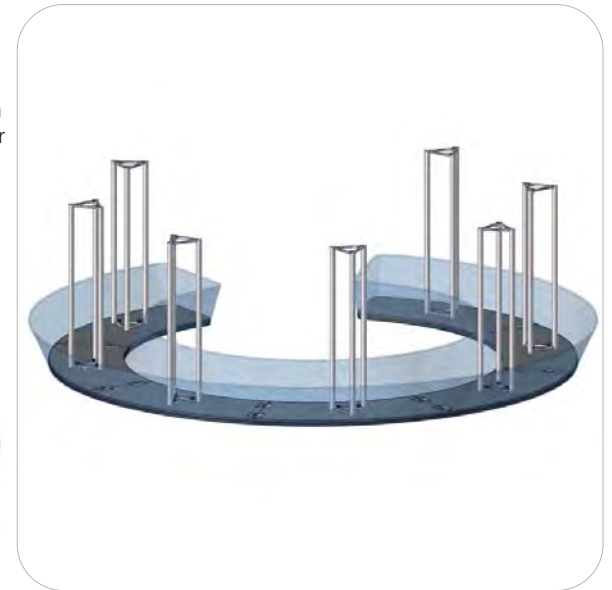

Step 4.

Pull up your silicone edge graphic. Push the silicone edges into the grooves of the counter top assembly. Zipper is located on center of inside curve for convenient counter access and storage.

Setup is complete.

