FabLite Tension Fabric FL-TF-10-07

FL-TF-10-07

FabLite 10ft displays have unique stylistic features and shapes, are portable and easy to assemble. The aluminum tube frame features snap-buttons and/ or spigot connections and zipper pillowcase fabric graphics. All displays come in portable, wheeled transit cases. Simply pull the pillowcase fabric graphic(s) over the frame and zip.



features and benefits:

- Premium aluminum tube frames with spigot assembly
- Easy to store and ship
- Quick to set up
- Weighted feet for added stability

dimensions:

Hardware

Assembled unit: 120.1"w x 96"h x 41.6"d 3051mm(w) x 2438mm(h) x 1057mm(d)

Approximate weight with cases: 58 lbs / 26.3 kgs

Shipping

Packing case(s): 1 OCE Case

Shipping dimensions: OCE: Expandable case length (I) may vary 40" - 66"l x 18"h x 18"d 1016mm-1677mm(I) x 458mm(h) x 458mm(d)

Approximate total shipping weight (includes cases & graphics): 71 lbs / 32.2 kgs

- Two zipper pillowcase fabric graphics
- Lifetime limited hardware warranty against manufacturer defects


Included In Your Kit




Included In Your Kit



Exploded View

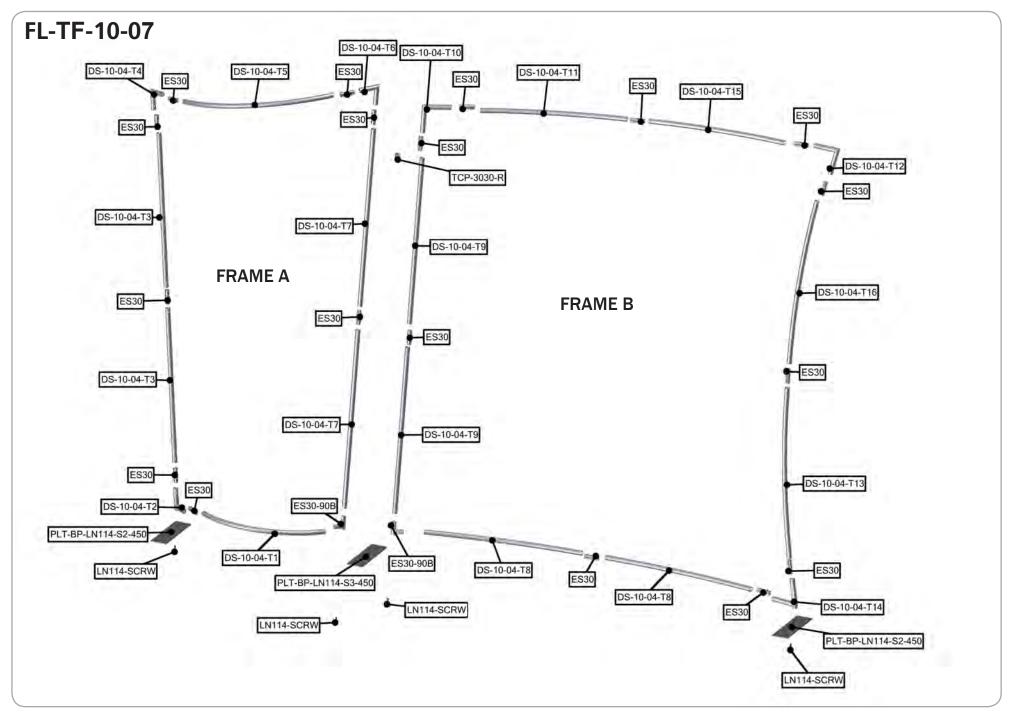

Labeling Diagram

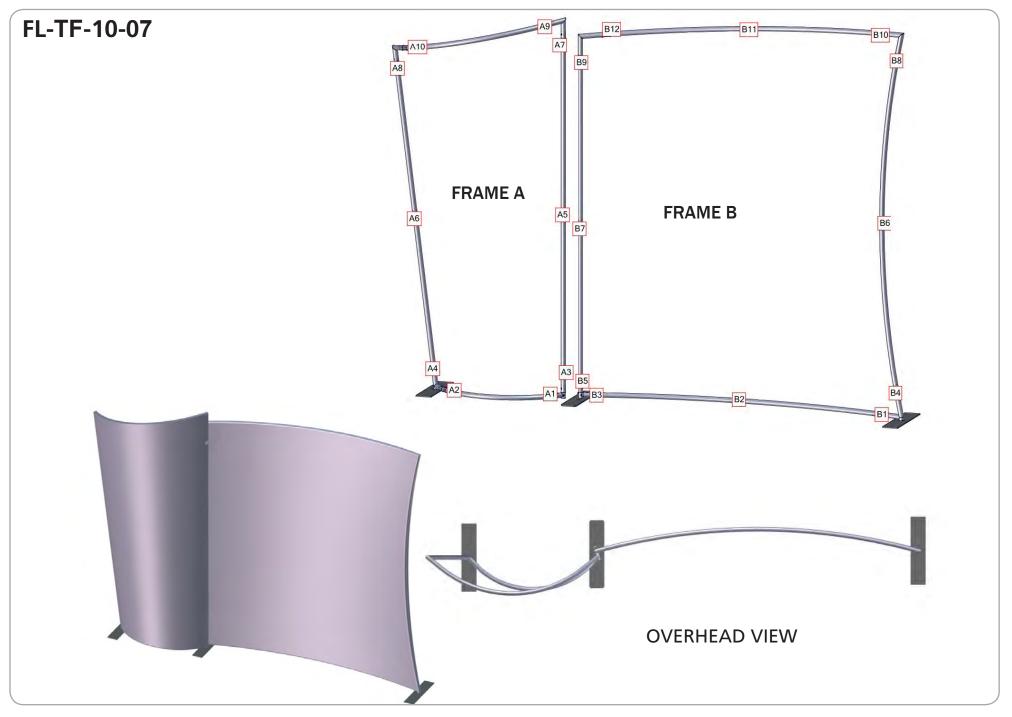

Connection Methods


FabLite structures use a number of different yet simple connection methods. Your kit will include one or more of the connection methods shown below. Steps within the Kit Assembly will reference a specific method for each connection point.

Connection Method 1: ES30 / ES50 / ES75



Compress the unlocked connector and slide one tube onto each end. Lock both screws carefully using your hex key tool. Be sure to lock securely, but do not overtighten.

Connection Method 2: Snap Buttons & Swage

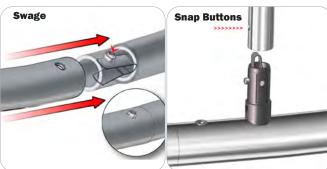

Locate the snap button on the connector or swage tube. Locate the hole on the corresponding tube. Press the snap button with your thumb and slide the tube and connector together so that the snap button snaps fully into the lock hole. To disassemble, press the snap button and pull apart.

Connection Method 3: ES30-90B / ES30-I / ES30-C



Compress one unlocked end of the connector and slide it through one tube end. Compress the other end of the connector and slide the second tube on. Lock both screws carefully using your hex key tool. Be sure to lock securely, but do not overtighten.

Connection Method 4: Tube Clamps



Be sure to fully assemble all frames before using clamps. With the clamp unlocked, place one tube of the first frame into the mouth of the clamp. Place the second tube (if applicable) into the second mouth of the clamp. With both frame's tubes in the clamp, be sure to lock securely, but do not overtighten.

Kit Assembly


Step by Step

Step 1.

Locate the components necessary to assemble Frame A. Assemble in the order specified in the Labeling Diagram.

Please reference Connection Methods 1 and 3 for more details.




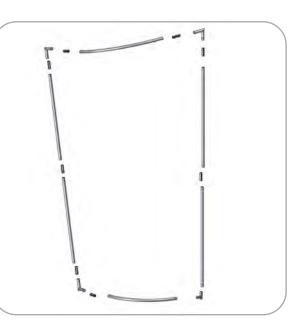


Step 2.

Locate the components necessary to assemble Frame B. Assemble in the order specified in the Labeling Diagram.

Please reference Connection Methods 1 and 3 for more details.

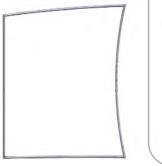

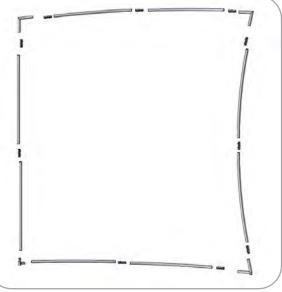

Step 3.

Locate the fabric cover for Frame A. For ease of application, lay the frame on the ground and pull the fabric cover over the top of the frame. Zip to enclose the frame.

Zipper located to the side and bottom of Graphic A





Step 4.

Locate the fabric cover for Frame B. For ease of application, lay the frame on the ground and pull the fabric cover over the top of the frame. Zip to enclose the frame.

Zipper located to the left side and bottom of Graphic B






Kit Assembly

Step by Step

Step 5.

Locate both LN114-S2, and LN114 Screws. Attach the pieces in order as shown on the figure to the right. Screw the LN114 screw through the bottom of the base to lock in place.

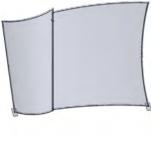



Step 6.

Locate the LN114-S3. Push the hubs on the base into the ES30-90Bs on the frames. Lock the foot to the frames using the screw on the sides of the ES30-90Bs.





Step 7.

Use the TCP-3030-R connector to brace both frames together at the top insides of both frames.

Please reference Connection Method 4 for more details.



