

Display Setup Instructions




10' x 10' Display Booth





Scout and Zoe's Piece Count: 1 of 2

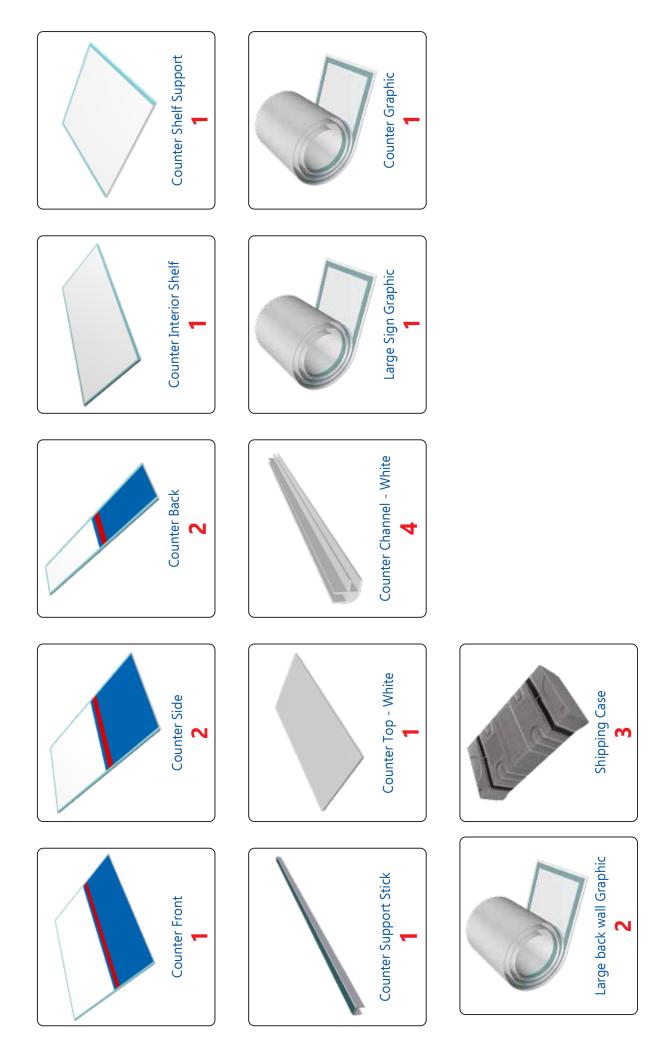

Scout and Zoe's Piece Count: 2 of 2




Steps to Assemble the In⊠niLite 10-01 Exhibit Booth:


- Step 1: Assemble the Pillars.
- Step 2: Place Pillars upright in their proper order.
- Step 3: Attach Wall Panels to Pillars.
- Step 4: Attach the Posters to the Wall Panels.
- Step 5: Install Shelf Support Bars.
- Step 6: Install Storage Doors.
- Step 7: Attach Shelves to Shelf Support Bars with Velcro.
- Step 8: Install Gridwall along the inside of the Pillars.
- Step 9: Assemble the Large Sign and attach to the Pillars with Velcro.
- Step 10: Attach Stem Lights to tops of Pillars.
- Step 11: Assemble Counter and place within the booth area.




Assemble the Pillars.


A) Unfold the Pillar Panels with the front sides facing downward.




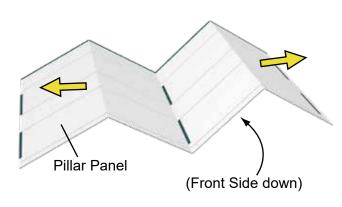

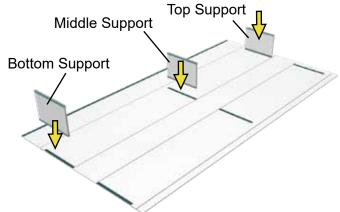



C) Fold Pillar around the Supports and attach with Velcro.

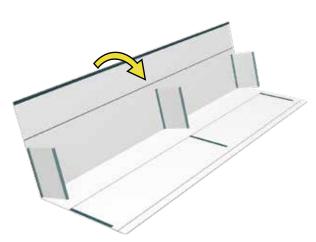


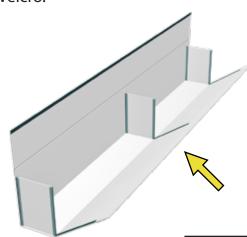

D) Close the Pillar using the Velcro strips along the Pillar edges.

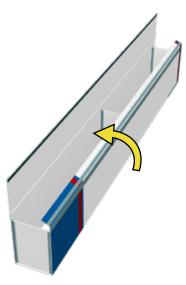

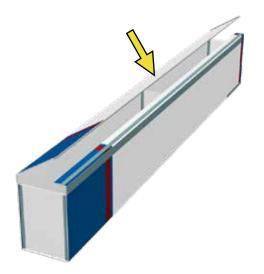


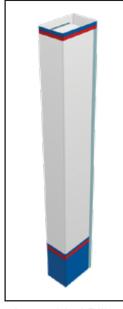


Assembled Pillar

Place Pillars upright in their proper order.

A) The following Floor Plan identifies the locations of the Pillars and Wall Panels.

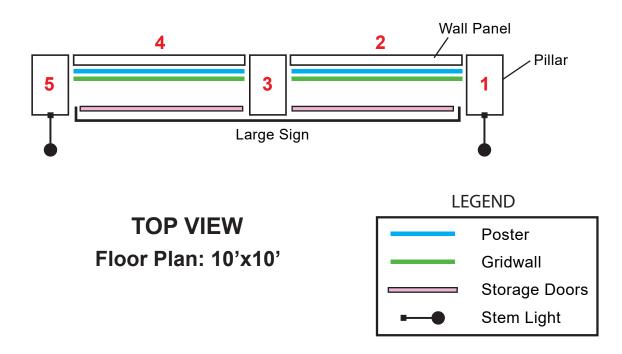


B) Place the assembled Pillars in their locations as numbered and indicated on the Floor Plan.

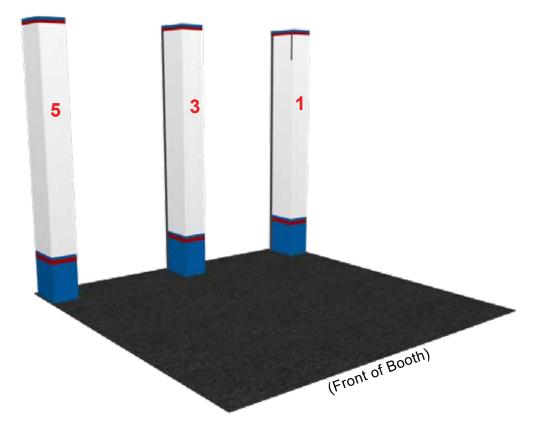


Attach Wall Panels to Pillars.

A) Unfold the bottom half of the Wall Panel, hold upright and attach to Pillar with Velcro. (Make sure that the Pillar and Wall Panel are flat on the floor surface when attaching and that the accent stripes are aligned with each other.)

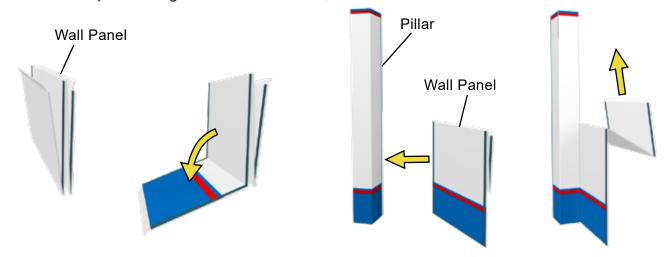


B) Unfold the top half of the Wall Panel and attach it to the Pillar matching the Velcro strips along the edges. Rotate the Wall Panel into position. Attach the next Pillar to the Wall Panel so that it is flat against the front face of the Wall Panel. Rotate the Pillar into position.

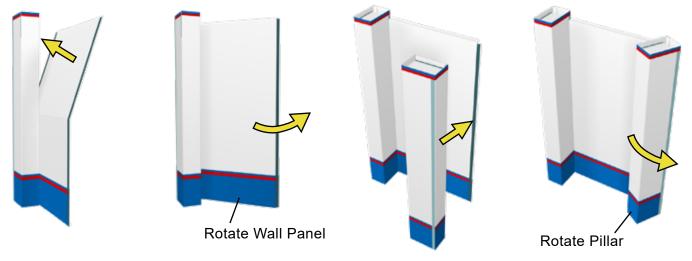

C) Repeat this process with the remaining Wall Panels and Pillars.



Attach the Posters to the Wall Panels with Velcro.

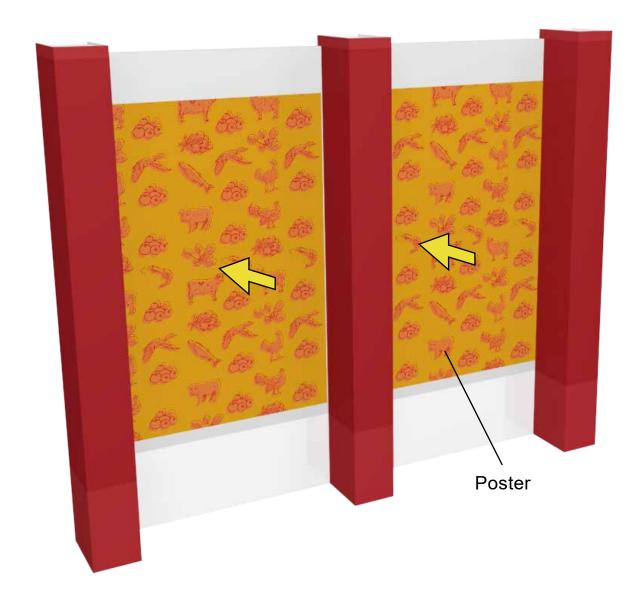


InfiniLite 10-01

Install the Shelf Support Bars.

A) Insert the shelf support bars into the designated openings in the Pillars.

Make sure that the Velcro on the bars is facing upward to attach the shelves.


NOTE: Images on this page show typical installation of Shelf Support Bars, Storage Doors and Shelves.

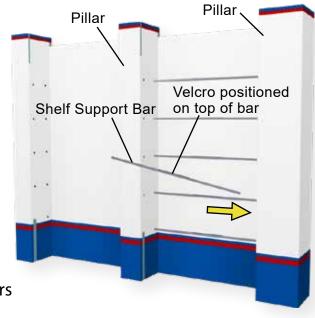

Install the Storage Doors. (Attach Storage Doors to the inside of the Pillars with Velcro.)



Attach Shelves to Shelf Support Bars and top of Storage Doors with Velcro.

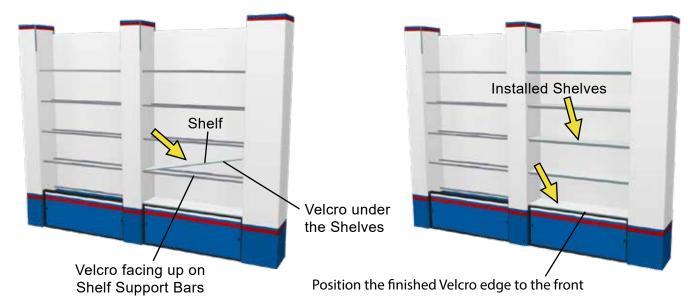

InfiniLite 10-01

Attach the Gridwall to the inside of the Pillars.

A) Insert the Hanging Bars into the openings in the Pillars. Push the rubber stoppers against

the Pillars to keep the bars securely in place.








B) Use a hand clamp to temporarily hold the Gridwall Sections in place during assembly. Attach tie wraps to the Gridwall and Hanging Bars to secure the sections in place. Move the hand clamp to the next Gridwall Section and continue the Gridwall assembly as required.





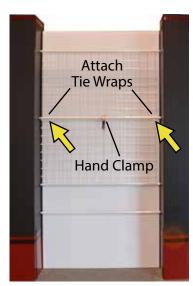

C) Use a hand clamp to temporarily hold the Gridwall Sections in place when the booth is dismantled. Cut the tie wraps to release the Gridwall Sections for packing and shipping.




View showing typical assembly of Gridwall Sections.




InfiniLite 10-01

Assemble the Large Sign and attach to tops of Pillars with Velcro.

A) Unfold the Large Sign.

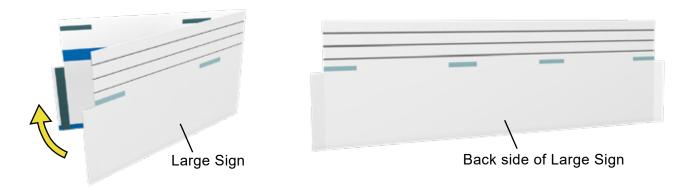

B) Fold down the top sections of the Sign along the flutes to form a triangle and Velcro closed.

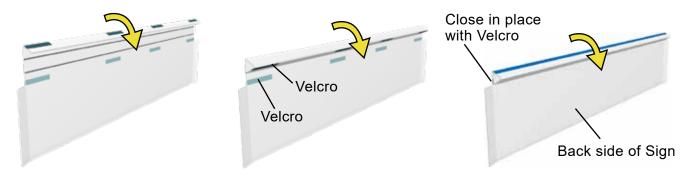


C) Attach Large Sign to Pillars with Velcro.



InfiniLite 10-01

Attach Stem Lights to Pillars.


- A) Place a wooden Light Support Stick on top of the proper Pillars as shown. (Use a ladder or step stool to access the top of the Pillar.) Secure the Stick to the back of the Pillar with a Binder Clip.
- B) Attach the Stem Light to the front end of the Pillar and Support Stick by adjusting the thumbscrew on the back of the Stem Light. (DO NOT overtighten the thumbscrew. Overtightening the adjustment thumbscrew may damage the Pillar.)

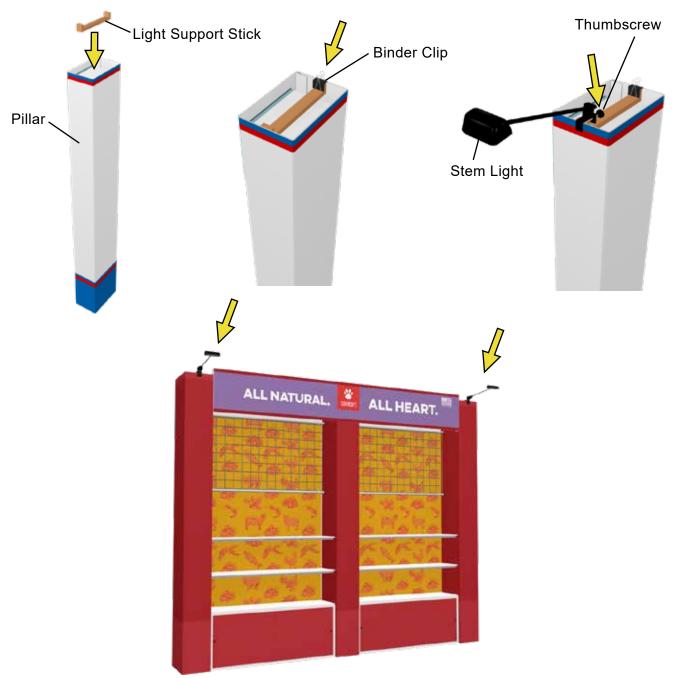




Counter Assembly:

A) Connect the Counter Panels together with the 90° Channels and Velcro.

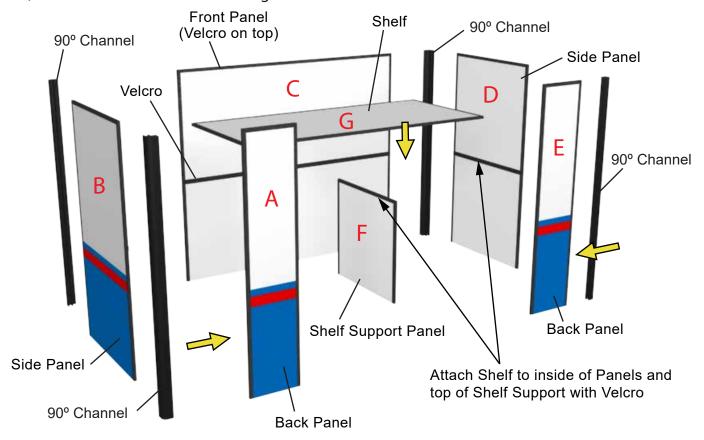



B) Place the Support Bar on top of the Back Panels and attach the Counter Top to the tops of the Panels and Support Bar with Velcro.

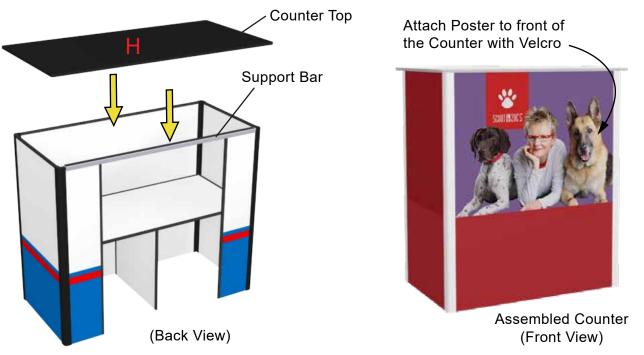

Case Layout

After disassembling the booth, organize the display components and pack them into the Shipping Cases:

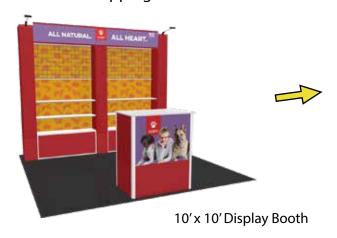

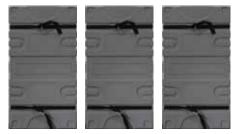

View showing Typical Shipping Cases

Organize the Booth Components in the following manner:

Case	Booth Components	Case	Booth Components
1	 Pillars Tops & Bottoms Sign Counter Graphic 	3	 Counter Top Counter Panels Panel Connectors Wall Panels
2	 Sliding Storages Shelf Support Bars Shelves Stem Lights Light Support Sticks Extension Cords Power Strips Gridwall Sections Hanging Bars 		